

WARRANTY

KAUFFMAN'S HANDCRAFTED CLOCKS
3019 WEST NEWPORT ROAD, RONKS, PA 17572
717-656-6857

www.KauffmansHandcraftedClocks.com

(TWO YEAR LIMITED WARRANTY ON Quartz CLOCKS)

This clock has been thoroughly tested, and is guaranteed for a period of 2 years against defects in materials and workmanship. Any necessary repairs during that period will be made without charge. (THIS GUARANTEED IS VOID ON CLOCKS THAT HAVE BEEN WET, TAMPERED WITH, IMPROPERLY OILED, TAKEN APART, OR OTHERWISE MISHANDLED)

If your clock has to be returned for repairs, it must be properly packaged and protected to insure safe delivery to our store. IT IS THE RESPONSIBLY OF THE CUSTOMER TO EITHER, SHIP OR RETURN THE CLOCK TO BE REPAIRED UNDER WARRANTY. THE CUSTOMER IS RESPONSIBLE FOR ALL SHIPPING COSTS, TO AND FROM OUR PLACE OF BUSINESS.

FILL IN NAME AND DATE OF PURCHASE

PLEASE KEEP FOR YOUR RECORDS

NAME _____

ADDRESS _____

CITY _____

STATE _____

ZIP _____

TELEPHONE NO. (_____) _____

DATE OF PURCHASE _____

MODEL NO. _____

SERIAL NO. _____

SET UP INSTRUCTIONS

1. Install two new, leak-proof "C" size alkaline batteries in the battery compartments with the positive (+) end towards the top of the clock. The clock will begin to "tick" once per second as soon as the batteries are installed.
2. Refer to the detailed "operating instructions" and select the desired chime functions using the control switches on the clock movement. You may turn the minute hand in either direction past the "12" to listen to the chimes and check the volume.
3. The pendulum hanger "located at the rear of the clock movement" is fastened to the left of the movement with a friction fit clip, push the bottom of the pendulum hanger to the right to release. Hook the pendulum onto the pendulum hanger. There may be a protective plastic film on the brass pendulum bob that should be removed.
4. Hang the clock perpendicularly on a sturdy hanger. A screw into a wall stud or a "molly fastener" is best.
5. Set the clock to the correct time by turning the minute hand forwards or backwards.
6. Give the pendulum a small push to start it swinging. The pendulum function is decorative and does not affect the running of the clock.

OPERATING INSTRUCTIONS

SETTING THE TIME

Set the clock to the correct time by turning the minute hand forwards or backwards. Do not turn the hour hand as this will cause the clock to strike incorrect hour counts.

ELECTRONIC CHIMES

The chimes are electronically programmed and require time to become synchronized with the hands. After setting the time, the clock must run until the next hour chime before the quarter hour chimes will agree with the hands.

When demonstrating the chimes or setting the time, the clock will not chime on the quarter hours and may chime several minutes before the hour. If the hands are moved from one hour to the next before the first hour chime has completely finished, the hour strike counts may be incorrect but will adjust correctly at the next hour.

MOVEMENT FUNCTIONS

Refer to the diagram for the location of the various switches and controls. Following is a description of the available functions.

Hand Set Knob

This knob can be used to turn the hands, but it is more convenient to set the time by simply moving the minute hand directly.

Volume Control

The volume control knob will regulate the chime volume. Turn it counter clockwise for full volume and clockwise for less volume.

Low Battery Indication

When the chimes begin to sound distorted or to chime erratically, it is an indication that the battery power is low, and the batteries must be replaced for proper chime functions. Silencing the chimes at night and/or selection of Bim-Bam chimes will extend battery life.

Switch #1

- ⊕ - Clock will chime each quarter-hour.
- - Clock will chime only on the hour.

Switch #2

- ☾ - Chimes will be softer for eight hours each day.
- ☀ - Chimes will be at normal volume at all times.
- 🔕 - Chimes will not play for eight hours each day.

When this switch is moved to the left or the right position, the chimes will be affected at the same time every day for eight hours beginning at the next hour. Normally this would be done in the evening for softer chimes or no chimes during the night.

Switch #3

- "O" - Chimes are off and will not sound.
- "A" - Ave Marie chime plus hour strike
- "W" - Westminster chime melody plus full hour strike.

